

Olympus C-4040 Quickstart

Camera Menu Configuration:


Menu Category	Option	Set to
SETUP	ALL RESET	OFF
CAMERA	DRIVE	SINGLE
	ISO	100
	A/S/M	M
	FLASH +/-	0
	NOISE REDUCTION	OFF
	DIGITAL ZOOM	OFF
	FULLTIME AF	OFF
	AF MODE	SPOT
	MICROPHONE	OFF
	FUNCTION	OFF
PIC	QUALITY	SHQ
	WB	AUTO or set to suit
	WB +/-	USE AS NECESSARY
	SHARPNESS	0
	CONTRAST	0

No changes to the remainder of the menu options from fact. default.



Olympus C-4040 Quickstart


Normal Shooting Method:

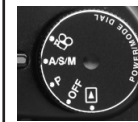

Place camera in **Manual Mode** by rotating the MODE dial to the A/S/M position. Make certain that the camera's Menu Configuration matches that shown on the other side of the card.




Set **White Balance** (in the menu) to a setting appropriate for the current environment.

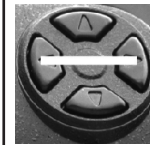

Aperture Control

Set **Aperture** to F10 by pressing the left arrow button the necessary number of times.

Set **shutter speed** by pressing the up or down arrow buttons until the EXPOSURE meter on the rear of the camera reads as close to neutral as you can get.

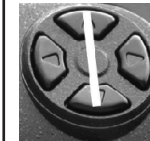

Shutter Speed Control

NOTE: If you are unable to set an exactly neutral exposure, use your judgement to choose whether it would look better a bit brighter or a bit darker and choose the partial step above or below neutral.

Take picture. Rotate camera and take second picture.

