

Sony DSC-S85 Quickstart

Camera Menu Configuration:

Option	Set to
White Balance	Auto or Set for each scene
ISO	Auto
Image Size	2272 x 1704
P. Quality	Fine
Rec. Mode	Normal
Flash Level	Low
P. Effect	Off
Sharpness	0



Sony DSC-S85 Quickstart

Normal Shooting Method:

Before Starting:



Place camera in **Manual Mode** by rotating the MODE dial to the M position. Make certain that the camera's Menu Configuration matches that shown on the other side of this card.



Make certain that the camera is zoomed all the way back by pressing the MINUS magnifying glass zoom button.

Set **White Balance** (1st option in the menu) to Auto, or another setting appropriate for the current environment.



Press the selector pad on the camera upwards until the **flash is disabled**.



Use the right-hand thumbdial to rotate the cursor on the right hand side of the view screen to the **APERTURE** setting. Press the thumbdial to activate the APERTURE for adjusting, and set it to **F8.0**.



Press the thumbdial again to keep this setting.



Rotate the thumbdial down to the **Shutter Speed** setting and press to activate. As you rotate the thumbdial, the EV setting above the aperture will change along with your shutter speed. Adjust shutter speed until the EV setting is as close to ZERO as possible before shooting.



Press the thumbdial again to keep this setting.

Take Picture 1. Rotate camera 180 degrees and take picture 2.

